



SHS-7540DN SHS-7540DNP

Operational Manual

Smoke Detector Covert Color Camera




Please read the Operational Manual before attempting to use this product.

FEATURES

- 1/3" Sony Super HAD CCD
- 540 TV Lines, HQ-1
- 3.6mm Standard Lens
- 0.5 Lux @ F2.0
- 12V DC

DIMENSIONS (Unit: mm)

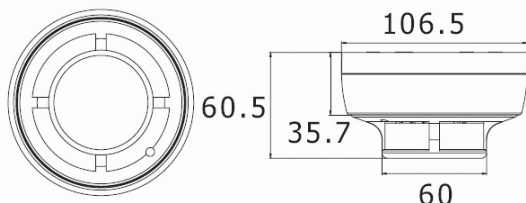

SPECIFICATIONS

Model	SHS-7540DN	SHS-7540DNP
TV System	NTSC	PAL
Image Sensor	1/3" Sony Super HAD CCD	
DSP	Sony HQ-1	
Total Pixels	811(H) x 508(V)	795(H) x 596(V)
Video Output	1 Vp-p Composite / 75Ω	
Resolution	540 TV Lines	
Minimum Illumination	0.5 Lux @ F2.0 Color mode automatically switches to B/W mode under 2.0 Lux	
S/N Ratio	More than 50dB (AGC OFF)	
Electronic Shutter Speed	Auto 1/60~1/100,000sec	Auto 1/50~1/100,000sec
Synchronization	Internal	
White Balance	AWB	
Back Light Compensation	Auto	
Auto Gain Control	Auto	
Lens	3.6mm Standard Lens	
Power Supply	12V DC	
Power Consumption	1.7W / 142mA	
Operation Temperature	-10°C ~ +50°C	
Operation Humidity	RH 85% or less	
Dimension	106.5(D) x 60.5(L)mm	
Weight	220g	

*Specifications are subject to change without notice

LIST OF COMPONENTS

- One (1) SHS-7540DN/SHS-7540DNP Camera with video/power cable
- One (1) Metal Plate
- Six (6) Screws
- Five (5) Wall Anchors
- One (1) Operational Manual

* For any returns, please include all components listed above with original packaging in **Resalable Condition**. **Absolutely No Returns** will be accepted if any component is missing/damaged or if any cable is cut or tampered with.



CAUTION

- 1. Never point the camera toward the sun**
Do not expose the lens directly to the sun or to strong light as this may damage the pick-up device.
- 2. Handle this camera with care**
Avoid any shock or bumping of the camera. Improper handling could damage the camera.
- 3. Requires a proper operating environment**
This camera is designed for indoor use. The allowable temperature range for operation of this camera is between -10°C ~ 50°C and the allowable humidity is 85%RH maximum.
- 4. Clean the front face to the pick-up device**
It is recommended that the pick-up device surface be cleaned before lens installation or whenever the lens is changed. Cleaning should be done by using a chamois, a very fine soft cloth, lens tissue, or cotton tipped applicator and ethanol to carefully remove any fingerprint or dust.
- 5. Check the power source voltage**
The power source voltage should be within the specified range. (Camera must meet the specifications). Camera must be connected to a surge protector at all times.
- 6. Objects and liquid entry**
Never push objects of any kind into this camera as this may touch dangerous voltage points of short out parts that could result in a fire or electric shock. Never spill any kind of liquid on the video product.
- 7. Servicing**
Do not attempt to service this video product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all service to qualified servicing personnel.
- 8. Damage requiring service**
Unplug this video product from the wall outlet and refer service to qualified servicing personnel under the following conditions:
 - a. When the power supply cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the video product.
 - c. If the video product has been exposed to rain or water.
 - d. If the video product has been dropped or the cabinet has been damaged.
 - e. When the video product exhibits a distinct change in performance.
- 9. Please follow your local privacy laws and regulations when using this camera in a public setting. O.K.I.USA is not responsible for any improper usage of this camera.**



WARRANTY

O.K.I.USA Products are covered under warranty for one year from the date of purchase. The warranty will automatically be voided if any of the following occurs:

- 1. Camera sticker is removed**
If the camera sticker is removed, we will not be able to confirm any information regarding when and where the product was purchased. We have no other way to verify the purchase record without the serial number on the camera sticker; therefore, it should not be removed.
- 2. Camera is modified in any way**
If the camera is scratched, damaged, or modified in a manner not described in this manual, the warranty will be voided immediately. It is the customer's responsibility to keep the camera in good condition.
- 3. Video or power cable is cut**
The video cable and the power cable should not be tampered with. Cutting or modifying of the cables will result in termination of the warranty.