



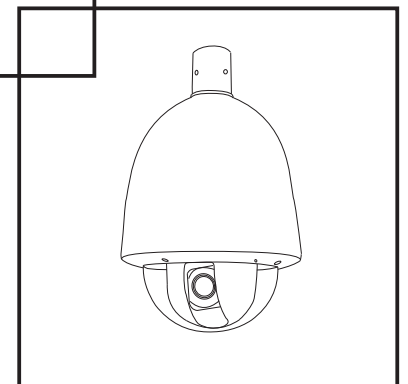

HD21PTZ-V20HB

**HD-SDI High Speed dome
Camera Series**

USER'S MANUAL

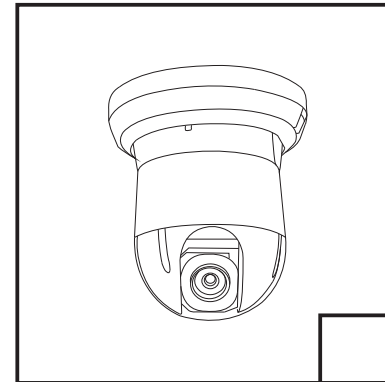

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

FCC COMPLIANCE STATEMENT

FCC INFORMATION: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USERS'S AUTHORITY TO OPERATE THE EQUIPMENT.

CE COMPLIANCE STATEMENT

WARNING: THIS IS A CLASS A PRODUCT. IN A DOMESTIC ENVIRONMENT THIS PRODUCT MAY CAUSE RADIO INTERFERENCE IN WHICH CASE THE USER MAY BE REQUIRED TO TAKE ADEQUATE MEASURES.

CAUTION: BEFORE ATTEMPTING TO CONNECT OR OPERATE THIS PRODUCT, PLEASE READ THE LABEL ON THE BOTTOM AND USER'S MANUAL CAREFULLY

CONTENTS

1. Precaution.....	1
2. Features.....	2
3. Packing list.....	3
4. Installation.....	4
5. Operation.....	9
6. OSD.....	10
7. Address and Protocol Setting.....	18
8. Address ID.....	21

Technical specification are subjects to change without prior notice. Manual may contain mistake or print error. All trademarks mentioned belong to their respective owners.

1. PRECAUTION

Refer all work related to the installation of this product to qualified service personnel or system installers.

Do not attempt to disassemble the appliance

To prevent electric shock, do not remove screws or cover. There are no user-serviceable parts inside. Contact qualified service personnel for maintenance

Handle the appliance with Care

Do not strike or shake, as this may damage the appliance. It should be protected against extreme pressure, vibration and humidity during transportation and storage. Damages caused by improper transportation avoid the warranty.

Do not use strong or abrasive detergents when cleaning the appliance body and transparent cover.

Use a dry cloth to clean the appliance when it is dirty. When the dirt is hard to remove, use a mild detergent and wipe gently.

Do not operate the appliance beyond its specified temperature, humidity or power source ratings.

Do not use the dome camera in an extreme environment where high temperature or high humidity exists.

Use the **indoor models** within -10°C to +50°C (14°F to 122°F) and a humidity below 90%. The input power source is 24V AC, 50/60Hz and requires 1000mA.

Use the **outdoor models** within -20°C to +60°C (-4°F to 140°F) and a humidity below 90%. The input power source is 24V AC, 50/60Hz and requires 2500mA.

Do not expose the indoor model of dome camera to water or moisture, not try to operate it in wet areas.

Take immediate action when the indoor speed dome becomes wet. Turn off the power and refer servicing to qualified service personnel. Moisture may damage the appliance and cause electric shock.

Do not point the camera lens directly to sunlight or any strong light source.

This will cause permanent damage to the camera and voids the warranty.

Read this user's manual carefully before operating the appliance.

Make sure that local electric safety standards are followed when using or installing the appliance

Do not install the camera in other orientation as designed.

And do not bend or squeeze the structure, as this may damage the mechanical structure of the appliance and voids the warranty.

Do not touch the Cover with bare hands or any object.

These will scratch the surface and affect the image quality.

2. FEATURES

The HD-SDI High speed dome camera series are designed for in- and outdoor video surveillance application. The integrated, motorized pan-tilt mechanic allows user to point the camera to any position (360° horizontal and 180° vertical). Both series can be equipped with digital zoom camera modules, which provide zooming function from 18 to 36 times (optical) and advanced image features.

Key features:

- 360° Pan and 180° Tilt range (90° with auto-image-flip)
- Support most well-known camera modules
- 128 preset points memory (80 can be used for auto tour function)
- 4 pattern tours
- 1 Scan tour
- Basic setup directly from Keyboard.
- Advanced setup through OSD (On Screen Display) menu.
- up to 24 privacy masking zones (depends on camera module)
- 7 alarm input & 2 output (4 input & 1 output pre-wired)
- Multi-Protocol through RS485.
- Direction Indicator on screen
- Aluminum Alloy structure with high intensity and heat-sinking
- High-precision step-motor for flicker-less image during movement.

Camera Features:

- 1/2.8" Sony Exmor® CMOS Sensor
- Full-HD HighResolution up to 1080p 30fps
- Built-in True Day&Night Filter
- Auto-Focus
- Auto-Iris
- Auto-Wide Dynamic Range
- Auto-Brightness control
- Auto-Balance
- Auto Slow-Shutter
- Electric Image Stabilization
- Stablezoom

Temperature monitoring and protection

- Alarm notification will be displayed once the inner temperature exceeds the limit
- In low temperature area, the dome camera will only start after the operation temperature is reached.
- Cooling fan activity is managed by the CPU (extends the duration)

Other features:


- Proportional pan for Focus / Speed on different zoom factor.
- Auto-resuming user-defined action, such as tour, pattern or scan after selectable idle time.
- Power-up Action activates tour or pattern by default.

3. PACKING LIST

Indoor Typ1



Core Unit
1 Piece



Indoor Roof-Mount
base platte
1 piece




Instruction and
operation manual
1 piece

Indoor Type2




Core Unit
1 Piece

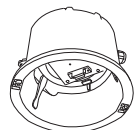

Embedded Mount
1 piece



dome cover
1 piece



Instruction and
operation manual
1 piece

Outdoor Typ1



Core Unit
1 Piece



Outdoor housing
and cover
1 piece




Spare dome cover
1 piece




Instruction and
operation manual
1 piece

WARNING: The transparent cover part is sensitive and should be handled with care. Do not touch or rub the surface in any way with the protection foil. Inproper cleaning method will cause permanent scratches on the cover and cause unclear image or focusing error of the camera. For Cleaning the cover, please replace the original first with the spare cover, and wash it by diving into warm water with non-corrosive cleaning solution.

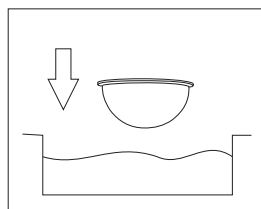

Unpacking

The speed dome is packed with protection. please take out the core unit carefully. In case of transportation please use the original packing box.

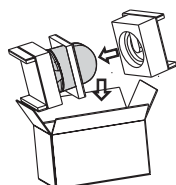

3

Some models may not be available in your country, please contact VIDO distributor for more details

4. INSTALLATION

Safety Instructions before starting


- Do not install and operate this appliance in a flammable and explosive environment.
- Make sure that the installation is done according to the local electricity safety regulation of your country.
- Before installation and maintenance, make sure that the appliance is disconnected from the power source.
- Do not use any power source other than 24V AC, in order to prevent damages to this device. For details, please refer to the section "Precaution" in previous chapter for more details.
- Handle the device during the installation carefully. Falls or extreme vibration may cause irreparable damages and avoid the warranty.
- Do not install or operate the appliance near any high-voltage devices or high-voltage cable. The safety distance should remain at least 50 m.
- To archive best image quality, its recommended to use underground cable shielded with steel tube. Do not install the cable without any protection.
- In a thunderstorm area or region with high inductive voltage, such as high voltage transformer stations, it is necessary to use additional lightning-proof equipments or lightning rod for protection.
- For outdoor installation, lightning-proof and grounding of the device should be considered. Please refer to the industrial safety regulation and request of your country.
- Grounding of the appliance should consider anti-interference and fulfill the safety requirements. Do not connect the ground with short-circuited or other high-voltage electric network.
- The resistance of down conductor should not exceed 4 Ohm, and its thickness should be at least 25mm²
- This appliance has the lightning-proof function which can prevent damages caused by high-voltage pulse, such as lightning strike below 1500.
- This appliance meets the Ip66 standard for water and dust proof. Do not install the indoor model for out-door application which is not designed with water protection. Make sure that the installation is protected from long-time water-drop or spatter, which may damage the appliance.
- Make sure that the environment of installation meets the requirement of the appliance, such as holding the weight, enough spaces for bracket and power supply.

4

4.INSTALLATION

Connector description


The wiring cable has connectors for power supply, video and I/O interface.

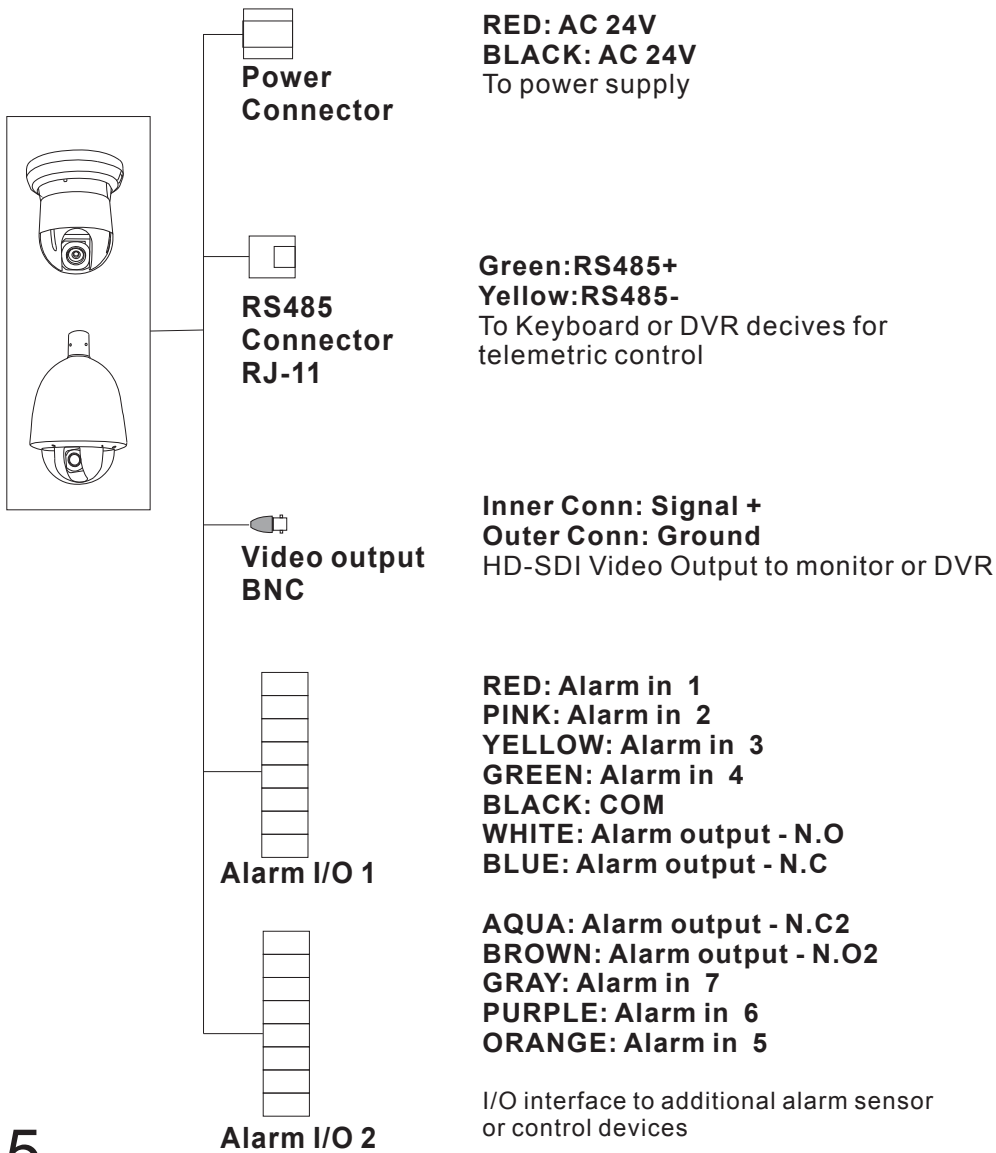

4.INSTALLATION

Using optional accessories

The High speed dome camera can be connected to various optional accessories through the standard connector types, which simplify the cable handling and avoids possible mistakes. All accessories are tested for max. compatibility and best performance.

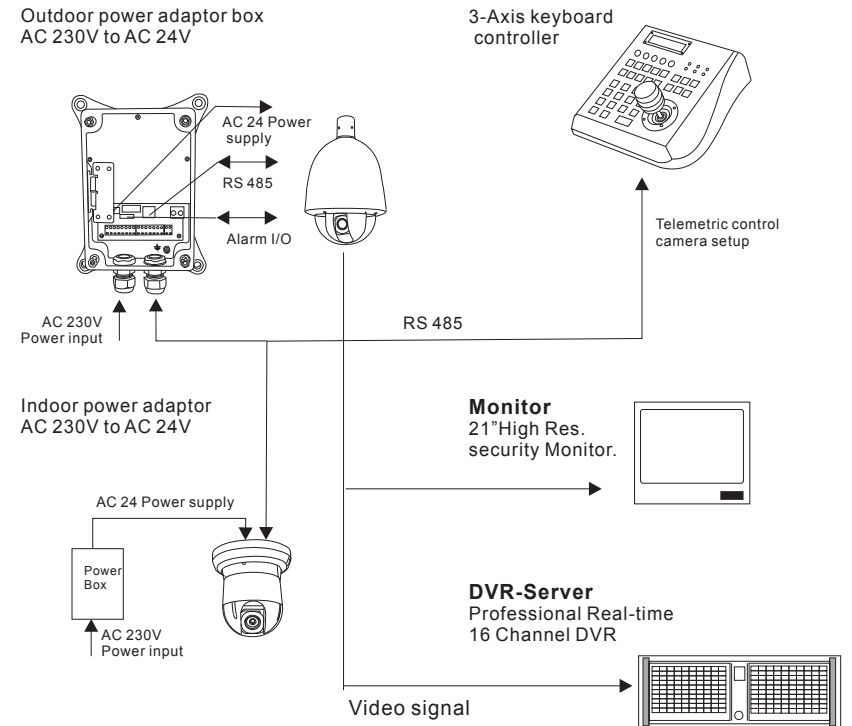

RS 485 cable

The telemetric control of the appliance uses Rs485 serial communication with half-duplex transmission technology. Depends on the cable type and baud rate, the transmission distance could vary. The following table shows max. distances based on cable with 0,56mm (24AWG) twisted pair:


Baud Rate	Max. Distance
2400 bps	1700m
4800 bps	1100 m
9600 bps	700m
19200 bps	400m

Due the environmental interferences, such as eletromagnetic and induction fields, or number of connected appliance on the RS-485 bus, the transmission range may be less, e.g with cable thinner than than 24AWG.

4.INSTALLATION

Star-Connection

The star-form connection is mostly used. it enables the connection of different dome cameras in longer distance. It is recommended to use RS-485 distributor to ensure the telemetric data transmission:

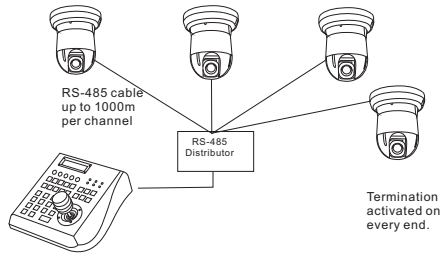

The advantage of star-connection is that every channel can work independently and take a cable length up to 1000 meters(depends on cable quality). In case more dome camera are installed, the star-connection can be extended with additional RS-485 distributors.



Video Cable

coaxial cable with 75Ω impedance with copper conductor at center conductor, and shielded with 95% copper. The following table shows different cable type and its maximum length:

Cable standard	Max. Distance (m /ft)
RG 59 /U	100m / 300 ft

The values are for reference only. Depends on the cable quality and environmental condition, the transmission distance might be less.


If the cable length is more than 100 m, it is recommended to use optional accessories, such as Video Amplifier or Fiber Transmission Converter, for boost the Video Signal.

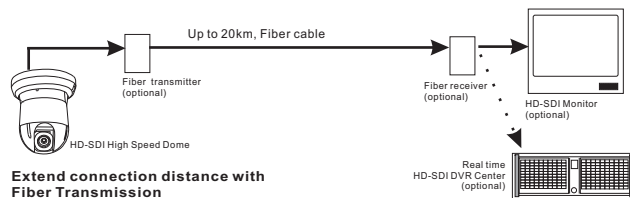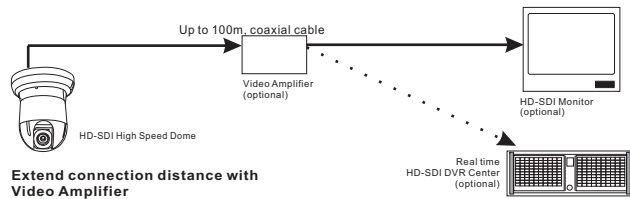


4.INSTALLATION

Installing the core unit to base board.


The HD-SDI HSD Series core unit and base board are packed separately, in order to be protected through the transportation. After unpacking and during the installation, the core unit should be installed as following:

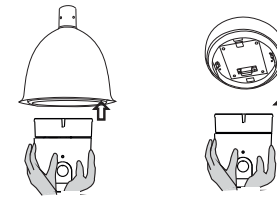



Installing the core unit by pushing into the housing. please note the position of connector. For releasing, please press the lever-lock to core and pull off the unit.

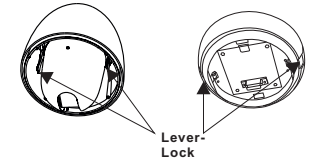

Once the base board is connected to power, the power LED will light.

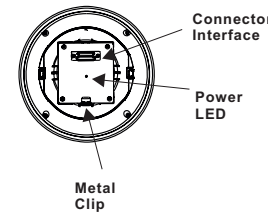

Heater connector on outdoor housing

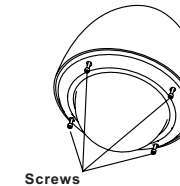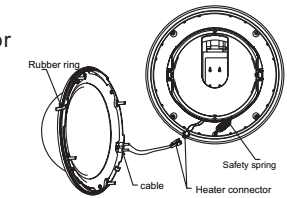

Outdoor housing cover

WARNING:


Do not pull or hold the connector interface with force. It is design only to connect the core unit and the base board. Any pressure on connector will cause damage and avoids the warranty.

Optional bracket accessories


The Indoor and Outdoor Model can be equipped with various bracket accessories for indoor and outdoor installation. Please contact your distributor for further details.




Ceiling mount

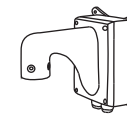


Wall mount and Power box




Corner Mount




Indoor Wall mount




Pole Mount




Outdoor Power Box




Indoor embedded mount



Indoor ceiling mount



Extended wall mount



Swan-Neck Mounting bracket



Wall mount

5. OPERATING THE SPEED DOME



Initial Screen

After powering up, the camera will enter the self-test mode and display the status screen (as in the picture left). It contains information about the model and current settings.

- **V1.0:** Current firmware version
- **Protocol:** control protocol which currently used
- **Dome address:** Address ID of speed dome. please refer to the section "Protocol setup" for details.
- **Comm 9600,N,8,1:** current setting of the serial communication interface.
9600: Baud rate. please refer to section "Baud-Rate setup" for details
N, 8, 1: No parity bit, 8 bit length, 1 stop bit. this setting can not be changed


The initial screen will stay remain on until any user action is being taken. If the power-up action is set, the initial info will vanish immediately.

Operation Screen

The operation screen can display additional information.

- Temperature: current temperature inside the speed dome(°C)
- Cam title: User definable camera title
- Zone: Current zone name
- Pan deg.: Pan angle, 0-359°
- Tilt deg.: Tilt angle, 0-90°
- Zoom Factor: Zoom factor

Display of the information can be activate or deactivate through the OSD menu. please refer to the system setting for details.

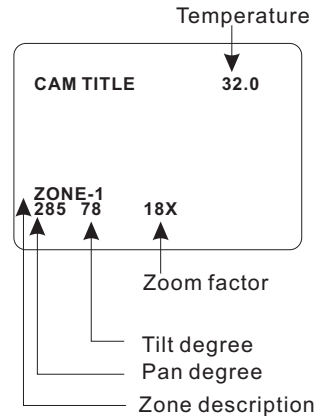

PTZ operation

For the surveillance operation, the dome can be controlled from a keyboard device, Multiplexer or DVR through RS-485 Interface. Make sure that the cable is connected and the settings (baud rate, Address ID and protocol) of both keyboard and the dome are configured correctly. For more description about the PTZ operation, please refer to the user's manual of the keyboard.

6. OSD

OSD Menu

The HSD Series are equipped with new OSD-Menu function. All operation functions and camera related settings can be changed or modified here. In order to use the OSD function, a telemetric controller device, such as Keyboard, DVR or other devices with similar function is necessarily required. please make sure that the device used is physically connected to the dome properly, and all connection parameters are set correctly.

How to start the OSD menu

To start the OSD Menu, you need to press following key on the keyboard:

With call 9 5 Enter or **2 X** call 9 Enter

With Shot 9 5 Enter or **2 X** Shot 9 Enter


In case a DVR is used for the OSD, select "goto preset 95" or 2 X "goto preset 9". Please refer to the DVR's operation manual for more details.

Note that in some certain situations, it is not possible to enter the OSD menu:

1. the dome is running tour
2. performing PTZ operation
3. dome is receiving command other than OSD-request from the keyboard.

please stop the operation and try again.

Main menu and navigation

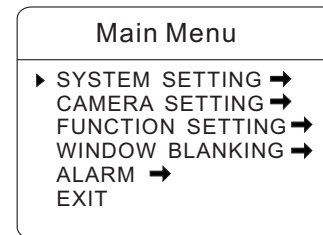

After entering the OSD Menu, the screen will show menu items. Use the controller's joystick to navigate through the menu's main and sub items by moving in the direction. The angle mark on the beginning of every items indicates the selection.


- UP, DOWN: - Moving between current menu items
- Changing the value in subitems
- RIGHT: - Enter the selected menu item
- Confirm the value change and return to item selection
- LEFT: Exit from sub menu

For more information, please refer to the illustration on the next page for the OSD menu structure.

Symbols and indicator

- ▶ Cursor.
- ⚙ Sub item is selected. use up or down to change value
- ➔ This item has subitem(s)

6. OSD - MAP

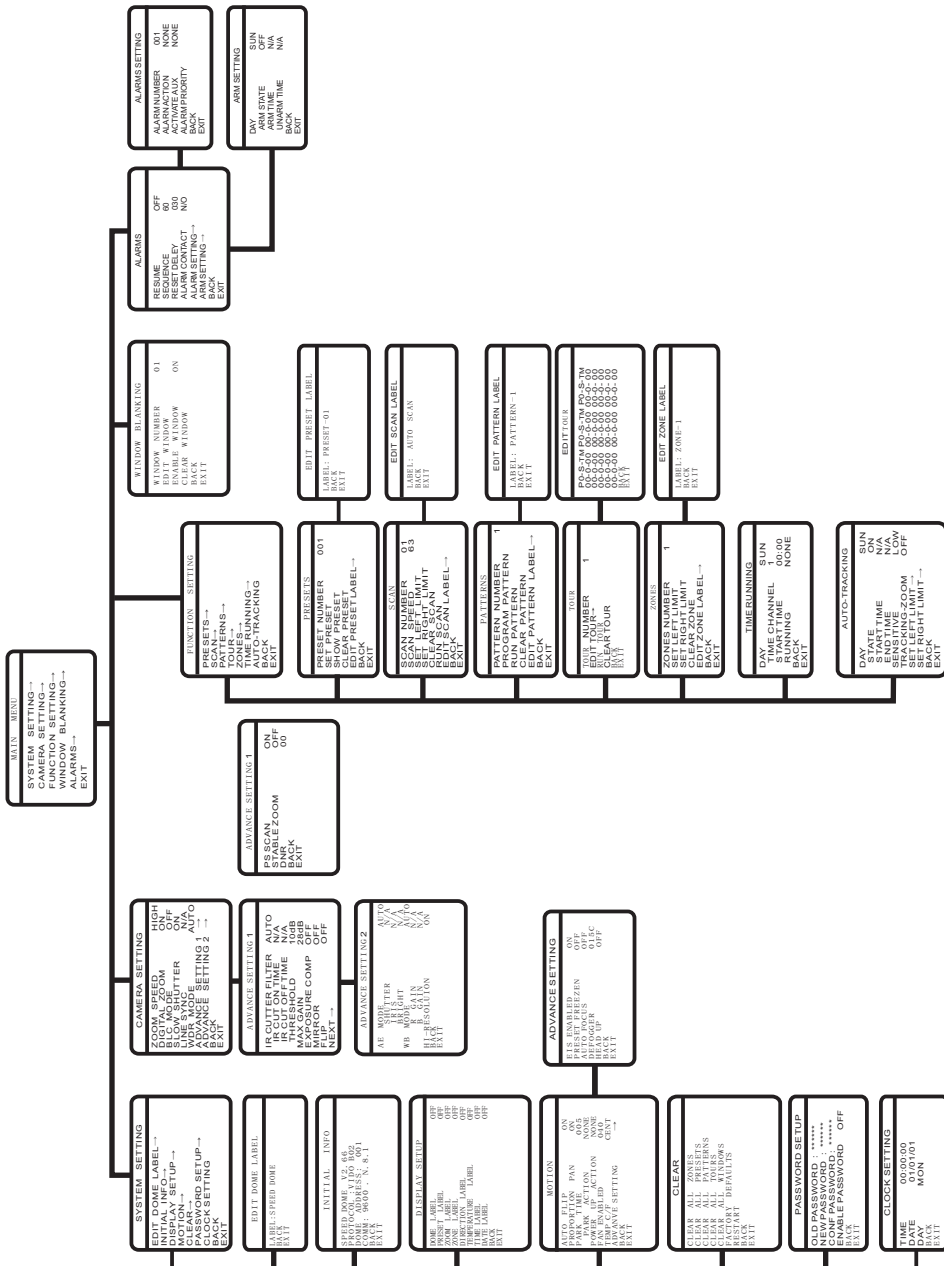

6.OSD - System Setting

SYSTEM SETTING

- EDIT DOME LABEL
- INITIAL INFO
- DISPLAY SETUP
- MOTION
- CLEAR
- PASSWORD SETUP
- CLOCK SETTING
- BACK
- EXIT

EDIT DOME LABEL

⚙️ LABEL : ENTRANCE

BACK

EXIT

INITIAL INFO

SPEED DOME V2.66

PROTOCOL : FACTORY

DOME ADDRESS : 001

COMM : 4800, N, 8, 1

BACK

EXIT

DISPLAY SETUP

⚙️ DOME LABEL	OFF
PRESET LABEL	OFF
ZOOM LABEL	ON
ZONE LABEL	OFF
DIRECTION LABEL	ON
TEMPERATURE LABEL	OFF
BACK	
EXIT	

System Setting

In system setting menu, you can modify operation and display setting, such as dome label, temperature and display of various value on the operational screen.

Dome Label:

1. use UP or DOWN to change the character.
2. use RIGHT to move to next char.
3. use RIGHT to move to last char and save.
4. use Left to first char and cancel.

Initial information:

Shows the information about current setting.

Display setup

Activate the display for the on-screen info in operation mode.

- Dome label:** the name of dome
- Preset label:** shows the label of every preset
- Zoom label:** shows zoom factor on screen
- Zone label:** shows the zone name
- Direction label:** shows the coordinates

Temperature label: shows the current temp in the speed dome

6.OSD - Motion, Clear

MOTION

⚙️ AUTO FLIP	ON
PROPORTION PAN	ON
PARK TIME	005
PARK ACTION	SCAN
POWER UP ACTION	AUTO
FAN ENABLED	040
TEMP C/F	CENT
ADVANCE SETTING	➔
BACK	
EXIT	

Motion control

AUTO FLIP: Auto. Image flip in tilt range from 90° to 180°

PROPORTIONAL PAN: depends on the zoom factor, the dome will adjust the pan and tilt speed automatically for comfortable viewing.

PARK TIME: defines the idle time prior to start a custom defined action(park action). The range is from 1 to 240 minutes. This function can be deactivated by setting the minute to 0.

PARK ACTION: the action which will be started after the idle time (park time). Selectable between Preset, Scan, Pattern (Nr), Tour or None.

POWER UP ACTION: defines the action which will be started after power up and self test. Selectable between Auto, Preset 1, Scan, Pattern (Nr), Tour or None. By selecting Auto, the dome will resume the last action before power off.

FAN ENABLED: Activate Fan when the dome reach the temperature.

TEMP C/F: Switch the temperature unit between Celcius and Fahrenheit.

ADVANCE SETTING

EIS ENABLED	N/A
PRESET FREEZEN	OFF
AUTO FOCUS	OFF
DEFOGGER	015C
HEAD UP	OFF
BACK	
EXIT	

Advance Setting

EIS ENABLED: Enable „Electric Image Stabilization“. This function is variable on certain camera modul.

PRESET FREEZEN: Freeze the image immediately.

AUTO FOCUS: Switch ON/OFF the Auto Focus

DEFOGGER: Activate Heater/Fan on the cold temperatur.

HEAD UP: Switch ON/OFF the proportional PT moving. Can combine with Camera Flip function.

CLEAR

CLEAR ALL ZONES
CLEAR ALL PRESETS
CLEAR ALL PATTERNS
CLEAR ALL TOURS
CLEAR ALL WINDOWS
FACTORY DEFAULTS
RESTART
BACK
EXIT

Clear

You can clear setting's memory or reset the camear to factory default. The follwing functions are supported:

- Clear Zones
- Clear all presets
- Clear all patterns
- Clear all tours
- Clear all windows
- Factory defaults

Warning: The clear action can not be undone. once a item is cleared it is impossible to retrieve the deleted setting. Please make sure that the requested clear action is desired.

OSD - Camera Setting

PASSWORD SETUP

OLD PASSWORD	: *****
NEW PASSWORD	: *****
CONF PASSWORD	: *****
ENABLE PASSWORD	OFF
BACK	
EXIT	

CLOCK SETTING

TIME	00:00:00
DATE	01/01/01
DAY	MON
BACK	
EXIT	

CAMERA SETTING

⚙️ ZOOM SPEED	HIGH
DIGITAL ZOOM	ON
BLC MODE	OFF
SLOW SHUTTER	ON
LINE SYNC	N/A
WDR MODE	N/A
ADVANCE SETTING 1	➔
ADVANCE SETTING 2	➔
BACK	
EXIT	

ADVANCE SETTING 1

⚙️ IR CUTTER FILTER	AUTO
IR CUT ON TIME	N/A
IR CUT OFF TIME	N/A
THRESHOLD	10dB
MAX GAIN	28dB
EXPOSURE COMP	OFF
MIRROR	OFF
FLIP	OFF
NEXT	

Password setup

You can change password to access the OSD menu. Default Password is 000000.

Clock setting

Some function like Auto-Tracking require the timer for activation.

Time: HH:MM:SS
DATE: YY/MM/DD
DAY: MON-SUN

CAMERA SETTING

In camera setting menu, you can setup camera module related settings. please note that depends on module's capability, some function may not available. please contact your local sales representative for detailed information.

ZOOM SPEED: defines the speed when performing zoom function.

DIGITAL ZOOM: Activate or deactivate the digital zoom function of the camera module.

BLC MODE: Select the Back Light Compensation mode, improves the image when an object has strong back light.

SLOW SHUTTER: Activates the Slow Shutter function of the camera, which provides a higher light sensibility in low-environment.

WDR: Activates the Wide Dynamic Range function, which improves the image contrast when an object has very strong light on background. Only available with camera modules with WDR.

ADVANCE SETTING1

IR CUT FILTER: Enables the removal of Infrared Cutter Filter (IRC), also known as "DAY/NIGHT" mode. with the removal of IRC, the camera turns into Black/White mode and has higher sensibility to low-light or IR-Light in the night. Selectable between On, Off, Auto or Time. Only available on camera module with IRC function.

MAX GAIN: improve the image quality in the Night modus

EXPOSURE COMP: This mode fixes the shutter speed of a short exposure. Configure the shutter speed of a long exposure by setting the ratio with regards to a short exposure with the exposure ratio parameter. Blocked-up shadow correction is not performed in this mode.

Mirror: This function reverses the camera horizontally.

Flip: This function turns the camera upside down.

OSD - Preset, Scan

ADVANCE SETTING 1

PS SCAN ON
 STABLE ZOOM ON
 DNR 00
 BACK
 EXIT

ADVANCE SETTING 2

AE MODE AUTO
 SHUTTER N/A
 IRIS N/A
 BRIGHT N/A
 WB MODE AUTO
 R GAIN N/A
 B GAIN N/A
 HI-RESOLUTION OFF
 BACK
 EXIT

FUNCTION SETTING

PRESETS →
 SCAN →
 PATTERNS →
 TOUR →
 ZONES →
 TIME RUNNING →
 AUTO-TRACKING →
 BACK
 EXIT

PRESETS

PRESET NUMBER 001
 SET PRESET
 SHOW PRESET
 CLEAR PRESET
 AUTO-TRACKING ON
 EDIT PRESET LABEL
 BACK
 EXIT

ADVANCE SETTING 1

These function are only available with the E-Series camera modules

PS SCAN: Activate Progressive Scan, can be combine on the WDR mode.

STABLE ZOOM: This function is performing correction using the Image Stabilizer function in accordance with the zoom ratio, and smoothly zooming up to approximately ×40 using a combination of the optical zoom and digital zoom.

DNR: Set the 2D/3D Digital Noise Reduction.

ADVANCE SETTING 2

Under the advanced setting, you can make improvements to image quality due to different environmental conditions.

AE MODE: Auto Exposure mode. Depends on the light condition in the surveillance area, you can set the AE in different modes and adjust the parameters, such as shutter speed, iris factor and brightness for the best image quality.

WB MODE: White balance mode, a image improvement based on DSP processing. you can also adjust the Red-Gain or Blue-Gain to change the color tone.

ALC, PLC: Average and Peak Level Control, additional setting to WB function. only avialbe with dedicated camera modules.

FUNCTION SETTING

In function setting menu, you can define and activate different PTZ fucitons, such as preset points, auto scan, tours and Pattern. Presets and tour functions can also be set or activated directly from keyboard device without OSD. Please refer to the keyboard's manual for operation details.

PRESETS:

PRESET NUMBER: G65-70 Series supports up to 128 presets. The number can be selected from 0 to 128.

SET PRESET: Defining the preset points directly in OSD by entering this menu item and move the PTZ. press IRIS-OPEN key on the keyboard to save. If the preset is pointed within digital zoom, it will automatically go back to max. optical zoom range in order to provide the best image.

SHOW PRESET: Moves to current preset point

6.OSD - Patterns, Tours

EDIT PRESET LABEL

LABEL : ROOM 1
 BACK
 EXIT

SCAN

SCAN NUMBER 01
 SCAN SPEED 63
 SET LEFT LIMIT
 SET RIGHT LIMIT
 CLEAR SCAN
 RUN SCAN
 EDIT SCAN LABEL
 BACK
 EXIT

PATTERNS

PATTERN NUMBER 1
 PROGRAM PATTERN
 RUN PATTERN
 CLEAR PATTERN
 EDIT PATTERN LABEL
 BACK
 EXIT

CLEAR PRESET: Clear the current preset

AUTO-TRACKING: Start Auto Tracking, if the preset is called.

EDIT PRESET LABEL: For the current preset, you can define a name which will be shon on the operation screen once the preset is called. please choose the preset number at first. The avaialbe characters are: 0-9, A-Z, <, >, . and space.

SCAN

The SCAN function moves the PTZ between 2-predefined points in constant speed. The following parameters can be set:

SCAN NUMBER: The Speed Dome supports up to 4 scan.

SCAN SPEED: cruising speed between the points.

SET LEFT LIMIT: defines the left point.

SET RIGHT LIMIT: defines the right point

CLEAR SCAN: Delete the scan setting

RUN SCAN: starting the scan function

EDIT SCAN LABEL: set the name for the scan

Pattern

Pattern records the user's operation steps on performing PTZ control and stores as a track. The Speed Dome can record up to 4 tracks with max. 180 sec. each.

PATTERN NUMBER: Selects the pattern number, from 1 to 4

PROGRAM PATTERN: Starts recording the pattern when selected. you can perfoeme PTZ movement for recording and shall not exceed 180 sec. Press IRIS-OPEN to save the track.

RUN PATTERN: Starts the current pattern

CLEAR PATTERN: Delete curretn pattern.

EDIT PATTERN LABEL : Sets the name for current pattern.

6.OSD - Zones and Privacy Mask

EDIT TOUR

⚙️ TOUR DWELL 001
 00-00-00-00-00-00-00-00-00
 00-00-00-00-00-00-00-00-00
 00-00-00-00-00-00-00-00-00
 00-00-00-00-00-00-00-00-00
 RUN TOUR
 BACK
 EXIT

ZONES

ZONES NUMBER 1
 SET LEFT LIMIT
 SET RIGHT LIMIT
 CLEAR ZONE
 EDIT ZONE LABEL
 BACK
 EXIT

TIME RUNNING

DAY SUN
 TIME CHANNEL 1
 START TIME 00:00
 END TIME 00:00
 RUNNING NONE
 BACK
 EXIT

AUTO TRACKING

DAY SUN
 STATE ON
 START TIME 00:00
 END TIME 00:00
 SENSITIVE LOW
 TRACKING-ZOOM OFF
 SET LEFT LIMIT →
 SET RIGHT LIMIT →
 BACK
 EXIT

Tour

Tour is an auto-run through selected preset points with definable pause time. A tour can store up to 32 presets points.

TOUR DWELL: pause time for every stop on the preset points. selectable between 000-255(s).

TOUR PRESETS: press IRIS-OPEN Key on the keyboard device to enter the preset point selection. Move the joystick with up and down to select the preset points by number and save the setting with IRIS-OPEN key. with IRIS-CLOSE key you can move to the previous selection. If a select point has the value 0, all the following presets points will be ignored.

RUN TOUR: Starts the tour and exit the OSD menu.

ZONE

You can define the zones in the whole PT range up to up to 8 zones with individual label. When the display setting "Zone Label" is activated, the label will be displayed on the operation screen. The definition of the zones should not be overlapped.

ZONES NUMBER: Current zone selection

SET LEFT LIMIT: Left limit of the current zone

SET RIGHT LIMIT: Right limit of the current zone

CLEAR ZONE: Delet the current zone

EDIT ZONE LABEL : change the laben of current zone.

TIME RUNNING

You can set up the timer to start a function like preset, tour or pattern. Each day can be set 4 action.

AUTO TRACKING

Auto-Tracking can seach people or object with high speed and low light performance.

DAY: set current day

STATE: activate AUTO-TRACKING on this day

START TIME: set the time for activation

END TIME: set the time for stop the tracking

SENSITIVE: set the sensitivity for the detection

TRAKING ZOOM: activate auto-zoom

SET LIMIT: set the max. angle for

the tracking.

6.OSD - Alarm Setting

WINDOW BLANKING

WINDOW NUMBER 01
 EDIT WINDOW
 ENABLE WINDOW OFF
 CLEAR WINDOW
 BACK
 EXIT

ALARMS

Resume OFF
 SEQUENCE 001
 RESET DELEY 030
 ALARM CONTACT N/O
 ALARM SETTING →
 ARM SETTING →
 BACK
 EXIT

ALARM SETTING

ALARM NUMBER 001
 ALARM ACTION TOUR
 ACTIVATE AUX AUX1
 ALARM PRIORITY LOW
 BACK
 EXIT

ARM SETTING

DAY SUN
 ARM STATE OFF
 ARM TIME N/A
 UNARM TIME N/A
 BACK
 EXIT

Privacy Mask (Window Blanking)

Privacy Mask is used to protect the privacy area not to be displayed once the camera is pointed on, such asu levatory area or the operation desk of an ATM machine. It might be required for video surveillance application depends on the local law regulation. The HSD Serie supports up to 24 private masks. (depends on installed camera module, please contact your local sales representative for more information)

WINDOW NUMBER: Mask number

EDIT WINDOW: Edit position of the mask by joystick of the keyboard. presse IRIS-OPEN to save.

ENABLE WINDOW: shows the mask on screen OFF

CLEAR WINDOW: Delete the mask

Alarms

RESUME: Continue the function on the camera , if it was setting before the alarms.

RESET DELAY: How long the camera stay in Alarm position.

ALARM CONTACT: Setting between N/C (normal Close) or N/O (normal Open).

ALARM NUMBER: curent Alarm number.


ALARM ACTION: Setting for PRESET, SCAN, TOUR, PAT 1-4, or NONE, if the camere in Alarm position.

ACTIVATE AUX: Setting Alarm Output, when Alarm is activate. Select between AUX1 , AUX2 (not connected) or BOTH.

ALARM PRIORITY: define the priority of the alarm input.

ARM SETTING: define the operation timer of the alarm

7. Dome Address & Protocol

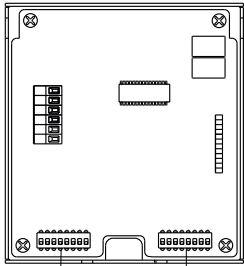

Sw1 Sw2

Protocol setting

In order to establish a connection for telemetric control with keyboard device, you need to setup the dome address and protocol.

The HSD series are capable with multiple communication protocol. The setting can be changed through the DIP-Switches on the rear side of the connector boards as Illustrated.

please use the following table for details setup. current pattern.

SW 1:
represent the domes address in binary form.
please refer to the list on next page for reference.

SW 2:
Used for protocol setting and baud rate.
DIP 1 to 6 : Protocol setting
DIP 7 and 8: Baud rate setting

Baud rate	DIP 7	DIP8
2400 bps	0	0
4800 bps	1	0
9600 bps	0	1
19200 bps	1	1

Protocol / DIP	1	2	3	4	5	6
VIDO B02	0	0	1	1	0	0
DIAMOND	1	0	0	1	0	0
HUNDA	1	0	1	1	0	0
KALATEL	0	1	0	1	0	0
LILIN	1	1	0	1	0	0
MOLYNX	0	0	1	0	0	0
PANASONIC	1	1	1	0	0	0
PELCO (D/P)	1	0	0	0	0	0
PHILIPS	0	0	0	0	0	1
SAE	0	1	0	0	0	0
SAMSUNG	0	0	0	1	0	0
SANTACHI	0	1	1	0	0	0
UNIVISION	0	1	0	0	0	1
VCL	1	1	0	0	0	0
VICON	1	0	1	0	0	0
AD	1	0	0	0	0	1

7. Address ID, 1 to 67

ID	Switchnumber (Sw1)	ID	Switchnumber (Sw1)
	Bit 1 2 3 4 5 6 7 8		Bit 1 2 3 4 5 6 7 8
	00 000000	34	0 1 0 0 0 1 0 0
1	1 0 0 0 0 0 0 0	35	1 1 0 0 0 1 0 0
2	0 1 0 0 0 0 0 0	36	0 0 1 0 0 1 0 0
3	1 1 0 0 0 0 0 0	37	1 0 1 0 0 1 0 0
4	0 0 1 0 0 0 0 0	38	0 1 1 0 0 1 0 0
5	1 0 1 0 0 0 0 0	39	1 1 1 0 0 1 0 0
6	0 1 1 0 0 0 0 0	40	0 0 0 1 0 1 0 0
7	1 1 1 0 0 0 0 0	41	1 0 0 1 0 1 0 0
8	0 0 0 1 0 0 0 0	42	0 1 0 1 0 1 0 0
9	1 0 0 1 0 0 0 0	43	1 1 0 1 0 1 0 0
10	0 1 0 1 0 0 0 0	44	0 0 1 1 0 1 0 0
11	1 1 0 1 0 0 0 0	45	1 0 1 1 0 1 0 0
12	0 0 1 1 0 0 0 0	46	0 1 1 1 0 1 0 0
13	1 0 1 1 0 0 0 0	47	1 1 1 1 0 1 0 0
14	0 1 1 1 0 0 0 0	48	0 0 0 0 1 1 0 0
15	1 1 1 1 0 0 0 0	49	1 0 0 0 1 1 0 0
16	0 0 0 0 1 0 0 0	50	0 1 0 0 1 1 0 0
17	1 0 0 0 1 0 0 0	51	1 1 0 0 1 1 0 0
18	0 1 0 0 1 0 0 0	52	0 0 1 0 1 1 0 0
19	1 1 0 0 1 0 0 0	53	1 0 1 0 1 1 0 0
20	0 0 1 0 1 0 0 0	54	0 1 1 0 1 1 0 0
21	1 0 1 0 1 0 0 0	55	1 1 1 0 1 1 0 0
22	0 1 1 0 1 0 0 0	56	0 0 0 1 1 1 0 0
23	1 1 1 0 1 0 0 0	57	1 0 0 1 1 1 0 0
24	0 0 0 1 1 0 0 0	58	0 1 0 1 1 1 0 0
25	1 0 0 1 1 0 0 0	59	1 1 0 1 1 1 0 0
26	0 1 0 1 1 0 0 0	60	0 0 1 1 1 1 0 0
27	1 1 0 1 1 0 0 0	61	1 0 1 1 1 1 0 0
28	0 0 1 1 1 0 0 0	62	0 1 1 1 1 1 0 0
29	1 0 1 1 1 0 0 0	63	1 1 1 1 1 1 0 0
30	0 1 1 1 1 0 0 0	64	0 0 0 0 0 0 1 0
31	1 1 1 1 1 0 0 0	65	1 0 0 0 0 0 1 0
32	0 0 0 0 0 1 0 0	66	0 1 0 0 0 0 1 0
33	1 0 0 0 0 1 0 0	67	1 1 0 0 0 0 1 0

7. Address ID, 68 to 135

ID	Switchnumber (Sw1)	ID	Switchnumber (Sw1)
	Bit 1 2 3 4 5 6 7 8		Bit 1 2 3 4 5 6 7 8
68	0 0 1 0 0 0 1 0	102	0 1 1 0 0 1 1 0
69	1 0 1 0 0 0 1 0	103	1 1 1 0 0 1 1 0
70	0 1 1 0 0 0 1 0	104	0 0 0 1 0 1 1 0
71	1 1 1 0 0 0 1 0	105	1 0 0 1 0 1 1 0
72	0 0 0 1 0 0 1 0	106	0 1 0 1 0 1 1 0
73	1 0 0 1 0 0 1 0	107	1 1 0 1 0 1 1 0
74	0 1 0 1 0 0 1 0	108	0 0 1 1 0 1 1 0
75	1 1 0 1 0 0 1 0	109	1 0 1 1 0 1 1 0
76	0 0 1 1 0 0 1 0	110	0 1 1 1 0 1 1 0
77	1 0 1 1 0 0 1 0	111	1 1 1 1 0 1 1 0
78	0 1 1 1 0 0 1 0	112	0 0 0 0 1 1 1 0
79	1 1 1 1 0 0 1 0	113	1 0 0 0 1 1 1 0
80	0 0 0 0 1 0 1 0	114	0 1 0 0 1 1 1 0
81	1 0 0 0 1 0 1 0	115	1 1 0 0 1 1 1 0
82	0 1 0 0 1 0 1 0	116	0 0 1 0 1 1 1 0
83	1 1 0 0 1 0 1 0	117	1 0 1 0 1 1 1 0
84	0 0 1 0 1 0 1 0	118	0 1 1 0 1 1 1 0
85	1 0 1 0 1 0 1 0	119	1 1 1 0 1 1 1 0
86	0 1 1 0 1 0 1 0	120	0 0 0 1 1 1 1 0
87	1 1 1 0 1 0 1 0	121	1 0 0 1 1 1 1 0
88	0 0 0 1 1 0 1 0	122	0 1 0 1 1 1 1 0
89	1 0 0 1 1 0 1 0	123	1 1 0 1 1 1 1 0
90	0 1 0 1 1 0 1 0	124	0 0 1 1 1 1 1 0
91	1 1 0 1 1 0 1 0	125	1 0 1 1 1 1 1 0
92	0 0 1 1 1 0 1 0	126	0 1 1 1 1 1 1 0
93	1 0 1 1 1 0 1 0	127	1 1 1 1 1 1 1 0
94	0 1 1 1 1 0 1 0	128	0 0 0 0 0 0 0 1
95	1 1 1 1 1 0 1 0	129	1 0 0 0 0 0 0 1
96	0 0 0 0 0 1 1 0	130	0 1 0 0 0 0 0 1
97	1 0 0 0 0 1 1 0	131	1 1 0 0 0 0 0 1
98	0 1 0 0 0 1 1 0	132	0 0 1 0 0 0 0 1
99	1 1 0 0 0 1 1 0	133	1 0 1 0 0 0 0 1
100	0 0 1 0 0 1 1 0	134	0 1 1 0 0 0 0 1
101	1 0 1 0 0 1 1 0	135	1 1 1 0 0 0 0 1

7. Address ID, 136 to 203

ID	Switchnumber (Sw1)	ID	Switchnumber (Sw1)
	Bit 1 2 3 4 5 6 7 8		Bit 1 2 3 4 5 6 7 8
136	0 0 0 1 0 0 0 1	170	0 1 0 1 0 1 0 1
137	1 0 0 1 0 0 0 1	171	1 1 0 1 0 1 0 1
138	0 1 0 1 0 0 0 1	172	0 0 1 1 0 1 0 1
139	1 1 0 1 0 0 0 1	173	1 0 1 1 0 1 0 1
140	0 0 1 1 0 0 0 1	174	0 1 1 1 0 1 0 1
141	1 0 1 1 0 0 0 1	175	1 1 1 1 0 1 0 1
142	0 1 1 1 0 0 0 1	176	0 0 0 0 1 1 0 1
143	1 1 1 1 0 0 0 1	177	1 0 0 0 1 1 0 1
144	0 0 0 0 1 0 0 1	178	0 1 0 0 1 1 0 1
145	1 0 0 0 1 0 0 1	179	1 1 0 0 1 1 0 1
146	0 1 0 0 1 0 0 1	180	0 0 1 0 1 1 0 1
147	1 1 0 0 1 0 0 1	181	1 0 1 0 1 1 0 1
148	0 0 1 0 1 0 0 1	182	0 1 1 0 1 1 0 1
149	1 0 1 0 1 0 0 1	183	1 1 1 0 1 1 0 1
150	0 1 1 0 1 0 0 1	184	0 0 0 1 1 1 0 1
151	1 1 1 0 1 0 0 1	185	1 0 0 1 1 1 0 1
152	0 0 0 1 1 0 0 1	186	0 1 0 1 1 1 0 1
153	1 0 0 1 1 0 0 1	187	1 1 0 1 1 1 0 1
154	0 1 0 1 1 0 0 1	188	0 0 1 1 1 1 0 1
155	1 1 0 1 1 0 0 1	189	1 0 1 1 1 1 0 1
156	0 0 1 1 1 0 0 1	190	0 1 1 1 1 1 0 1
157	1 0 1 1 1 0 0 1	191	1 1 1 1 1 1 0 1
158	0 1 1 1 1 0 0 1	192	0 0 0 0 0 0 1 1
159	1 1 1 1 1 0 0 1	193	1 0 0 0 0 0 1 1
160	0 0 0 0 0 1 0 1	194	0 1 0 0 0 0 1 1
161	1 0 0 0 0 1 0 1	195	1 1 0 0 0 0 1 1
162	0 1 0 0 0 1 0 1	196	0 0 1 0 0 0 1 1
163	1 1 0 0 0 1 0 1	197	1 0 1 0 0 0 1 1
164	0 0 1 0 0 1 0 1	198	0 1 1 0 0 0 1 1
165	1 0 1 0 0 1 0 1	199	1 1 1 0 0 0 1 1
166	0 1 1 0 0 1 0 1	200	0 0 0 1 0 0 1 1
167	1 1 1 0 0 1 0 1	201	1 0 0 1 0 0 1 1
168	0 0 0 1 0 1 0 1	202	0 1 0 1 0 0 1 1
169	1 0 0 1 0 1 0 1	203	1 1 0 1 0 0 1 1

7. Address ID, 204 to 255

ID	Switchnumber (Sw1)	ID	Switchnumber (Sw1)
	(Bit) 1 2 3 4 5 6 7 8		(Bit) 1 2 3 4 5 6 7 8
204	0 0 1 1 0 0 1 1	238	0 1 1 1 0 1 1 1
205	1 0 1 1 0 0 1 1	239	1 1 1 1 0 1 1 1
206	0 1 1 1 0 0 1 1	240	0 0 0 0 1 1 1 1
207	1 1 1 1 0 0 1 1	241	1 0 0 0 1 1 1 1
208	0 0 0 0 1 0 1 1	242	0 1 0 0 1 1 1 1
209	1 0 0 0 1 0 1 1	243	1 1 0 0 1 1 1 1
210	0 1 0 0 1 0 1 1	244	0 0 1 0 1 1 1 1
211	1 1 0 0 1 0 1 1	245	1 0 1 0 1 1 1 1
212	0 0 1 0 1 0 1 1	246	0 1 1 0 1 1 1 1
213	1 0 1 0 1 0 1 1	247	1 1 1 0 1 1 1 1
214	0 1 1 0 1 0 1 1	248	0 0 0 1 1 1 1 1
215	1 1 1 0 1 0 1 1	249	1 0 0 1 1 1 1 1
216	0 0 0 1 1 0 1 1	250	0 1 0 1 1 1 1 1
217	1 0 0 1 1 0 1 1	251	1 1 0 1 1 1 1 1
218	0 1 0 1 1 0 1 1	252	0 0 1 1 1 1 1 1
219	1 1 0 1 1 0 1 1	253	1 0 1 1 1 1 1 1
220	0 0 1 1 1 0 1 1	254	0 1 1 1 1 1 1 1
221	1 0 1 1 1 0 1 1	255	1 1 1 1 1 1 1 1
222	0 1 1 1 1 0 1 1		
223	1 1 1 1 1 0 1 1		
224	0 0 0 0 0 1 1 1		
225	1 0 0 0 0 1 1 1		
226	0 1 0 0 0 1 1 1		
227	1 1 0 0 0 1 1 1		
228	0 0 1 0 0 1 1 1		
229	1 0 1 0 0 1 1 1		
230	0 1 1 0 0 1 1 1		
231	1 1 1 0 0 1 1 1		
232	0 0 0 1 0 1 1 1		
233	1 0 0 1 0 1 1 1		
234	0 1 0 1 0 1 1 1		
235	1 1 0 1 0 1 1 1		
236	0 0 1 1 0 1 1 1		
237	1 0 1 1 0 1 1 1		